

# CITIZEN QUARTZ

## Caliber No.

1400, 1401, 1410, 1429, 1430, 2000, 2001, 2002, 2010, 2020, 2030, 2031, 2040, 2041, 2100, 2110, 2140, 2180, 2200, 2201, 2202, 2250, 2810, 2820, 2830, 2831, 2850, 2851, 2852, 2860, 2880, 2890, 2950, 2951, 3220, 3600, 3610, 3620, 3621, 3630, 3800, 3801, 3811, 3802, 3810, 4020, 4021, 4030, 4031

CTZ-6543

1

## INSTRUCTION MANUAL

Thank you very much for purchasing a CITIZEN QUARTZ WATCH. To ensure correct use, please read these instructions carefully. Please ensure that the Citizen international guarantee card is supplied with the watch on purchase in order that you may claim the guarantee service (subject to the terms of guarantee).

### SETTING INSTRUCTIONS



Pull out the crown to the first clicking position and adjust time

Normal position (for time indication)

Pull out the crown to the second clicking position and adjust time

Pull out the crown to the first clicking position and adjust calendar

2

Three-hand are provided for time display. However, the principle does not differ with the two-hand time display systems and you can refer to the above illustration for them also.

### \*Caution for handling screw-lock crowns.



Press the screw-lock type crown straight downward to lock it. Avoid pressing it too hard and make sure it is locked properly.

3

### SPECIAL HANDLING INSTRUCTIONS

#### 1. Power cell replacement

Have the power cell replaced by an authorized Citizen Dealer or by the dealer at the place where the watch was purchased.

#### 2. Water-resistant

Water-resistances of individual Citizen watches are ranked from A through D as explained in the following chart. Check the ranking of your watch against the chart, then use it in a manner befitting to its water-resistant characteristics.

4

Indication			Water-related use				Water-resistant characteristics
Water-resistant performance ranking	Dial	Case/back	Face-washing (sweat, raindrops, etc.)	Swimming	Skin diving (Diving without an oxygen cylinder)	Scuba diving (Diving with oxygen cylinder)	
A			×	×	×	×	Non-water-resistant watch and must be kept away from water.
B		WATER RESISTANT	○	×	×	×	An ordinary water-resistant watch and can withstand sweat, raindrops, etc. in daily use.
C	WATER RESISTANT 100	WATER RESISTANT	○	○	○	×	For frequent use with water. It is not specially designed for scuba diving.
D	Water-resistant indications are 150M or deeper	WATER RESISTANT	○	○	○	○	For skin diving and scuba diving. (Up to the respective indicated depths)

WATER RESISTANT may sometimes be abbreviated to WATER RESIST.

○ indicates OK  
× indicates AVOID

\*Always set the crown at the normal position.  
\*Tighten screwlock crown completely.

#### 3. Avoid extreme temperatures



Avoid exposing this watch to direct sunlight or leaving it in a high temperature location for a long period of time.

- This will cause malfunctioning and shorten the life of the power cell.



Do not leave this watch for a long period in a cold place.

- This may cause the watch to gain or lose slightly.
- If it is put on the wrist, the original accuracy will be restored.

#### 4. Keep the watch dry



Do not operate when the watch is wet.

5

#### 5. Avoid strong shocks



Avoid dropping it on the ground or otherwise shocking it severely.



This watch will withstand normal shocks incurred while playing golf or other sports.

#### 6. Avoid strong magnetic fields



Do not place the watch near a magnet.

This watch is unaffected by magnetic fields from domestic appliances, such as television and stereo sets.

Do not place near magnets or within magnetic fields such as near magnetized articles or the magnetic door of a refrigerator. A magnetic field will cause the watch to go down, and the time will have to be readjusted.

6

## 7. Avoid chemicals and gases



Avoid wearing this watch in the presence of chemicals and gases. If mercury or any chemical (such as fuel gasoline, benzine, thinner, alcohol, spray liquid or cosmetics or the like, manicure solution, manicure remover, adhesive, and paint) attaches, discoloration, deterioration or damage to case, band or other components may occur.

## 8. Keep the watch clean

Wipe up the water that adheres to the case, the glass and the band with a soft cloth. Dirt left on the case or band may cause skin irritation.

A watchband gets dirty easily with sweat or dust since it is in such close contact with the skin, and even a stainless or gold-plated band may sometimes get rusty in the long run if it is left dirty.

A mesh band is very fine, so its particular "flexibility" will be lost if it is soiled over a long period of use.

In this respect, it is necessary to wash a metallic watchband periodically in order to keep the band beautiful at all times.

7

A metallic watchband should be usually washed with a brush in soapy water. After that it should be wiped well with a soft absorbent cloth. After that, the band should be left to dry completely. Please make sure no water gets inside the watch movement when the band is washed.

## 9. Periodic Inspection



Periodic inspection of the watch at 1 to 2 year intervals is recommended. Periodically replace the parts shown in the following illustrations with genuine CITIZEN spare parts.

### Seals (Packing)



### Spring Groove

10. Be sure to keep the power cell away from infants or small children; should accidental ingestion occur, consult a doctor at once.

8

## SPECIFICATIONS

### Case Back



Caliber No

Depending upon their caliber, Citizen wrist watches differ from one another in respect of (1) power cell life, (2) accuracy (by how much the watch runs fast/slow per month). Please look at the back lid of your watch, and check the Caliber No. Then check the caliber characteristics of your watch from the table below.

Cal	Power cell life (years)	Accuracy (Second per month)	
14XX	8	15	1400, 1401, 1410, 1429, 1430
200X	2	20	2000, 2001, 2002
201X	2	20	2010
202X	3	20	2020
203X	3	20	2030, 2031
204X	3	20	2040, 2041
21XX	2	20	2100, 2110, 2140, 2180
220X	3	15	2200, 2201, 2202
225X	3	20	2250
281X	2	15	2810
282X	2	15	2820
283X	2	15	2830, 2831
285X	2	15	2850, 2851, 2852
286X	2	15	2860
288X	3	20	2880
289X	3	20	2890
295X	2	20	2950, 2951
322X	3	20	3220
36XX	2	20	3600, 3610, 3620, 3621, 3630
38XX	5	20	3800, 3801, 3811, 3802, 3810
402X	2	30	4020, 4021
403X	2	30	4030, 4031

\*The stated accuracy is obtained when the watch is used at normal temperature (5°C-35°C, 41°F-95°F).

The already mounted power cell is for the purpose of testing the watch mechanism. It is mounted when assembling the watch, and thus it may run out before the stated power cell life.